# Xerox® WorkCentre® 4265 Multifunction Printer Quick Tips



## For Service, Supplies or Assistance, please call:

1 Load documents face up



1 Place documents face down on the glass



2 Press the Services Home button



3 Select from one of the following options



## **How to Release a Secure Print Job**

- 1. From the printer, press the **[Job Status]** button on the Control Panel. The Job Status screen will be displayed.
- 2. Select the [Secure Print Jobs and More] tab on the Touch Screen.
- 3. Select the [Secure Print] button.
- 4. Select the job, and then select the **[Document List]** button.
- 5. When prompted, enter your password and then select the **[Confirm]** button.
- 6. Select your job, select the **[Print]** button, and respond to any on-screen prompts.
- 7. Select the **[Close]** button several times until the Job Status screen is displayed.
- 8. Press the **[All Services]** button on the Control Panel to exit.



## CopySelect required features

Enter copy quantity

# Fax Image Quality Adjustment Pax Add Options Assembly Enter Fax Number Dialling Characters... Favorites... Pevice Address Book... 2-Sided Scanning Text Original Type Resolution Fine (200 dpi) Text Cover Sheet Off

#### Fax

- Select Enter Number field
- Enter the fax number using the numeric keypad
- Confirm the number by pressing the Add button
- If additional numbers are required, repeat steps above
- Select required features



### **Email**

- Select New Recipient
- Select To, CC, or BCC
- Using the keypad, enter the email address
- Select Add to add the address to the recipient list
- If additional addresses are required, repeat steps above
- Select Save

### For more information, please refer to:

User guides: available to print via the Machine Status button on the control panel, or www.support.xerox.com